




iPod mini

Quick Reference

Using iPod mini Controls

Use the iPod mini Click Wheel and Select button (in the center) to navigate through onscreen menus, play songs, change settings, and view information. Move your thumb lightly around the Click Wheel to scroll to a menu item. Press the Select button to select the item. Press Menu on the Click Wheel to go back to the previous menu.

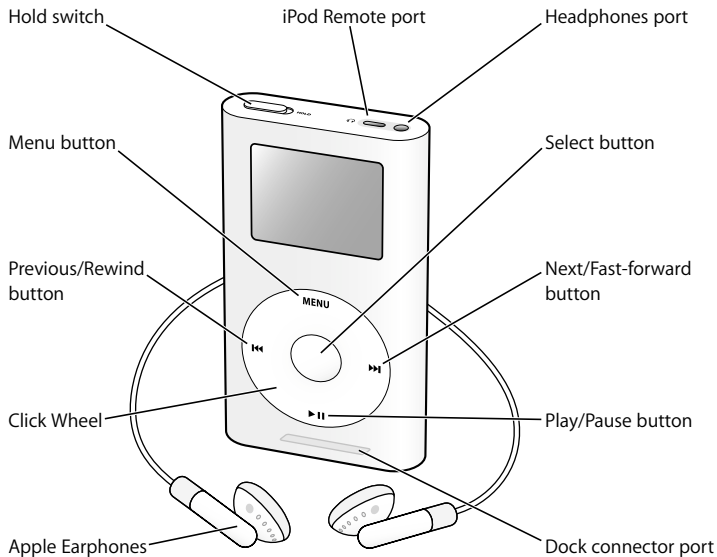

iPod mini Controls

Reset iPod mini (For use during troubleshooting)	Toggle the Hold switch (set it to hold, then turn it off again). Then press the Menu and Select buttons simultaneously for about 6 seconds, until the Apple logo appears.
Turn iPod mini on	Press the Select button.
Turn iPod mini off	Press and hold Play/Pause.
Turn the backlight on or off	Press and hold Menu or select Backlight from the main menu.
Select a menu item	Scroll to the item and press the Select button.
Go back to the previous menu	Press Menu.
Browse for a song	Select Playlists or Browse from the main menu.
Play a song	Highlight the song and press the Select or Play/Pause button.
Play all the songs in a list	Highlight the list title (an album title, or the title of a playlist, for example) and press Play/Pause.
Change the volume	From the Now Playing screen, use the Click Wheel. You can also use the optional iPod Remote (available at www.apple.com/store) from any screen.
Pause a song	Press Play/Pause when no song or list is highlighted.
Disable iPod mini controls (So you don't activate them accidentally)	Set the Hold switch to hold (an orange bar appears).

iPod mini Controls

Skip to any point in a song	From the Now Playing screen, press the Select button. Then scroll to any point in the song.
Skip to the next song	Press Next/Fast-forward.
Start a song over	Press Previous/Rewind.
Play the previous song	Press Previous/Rewind twice.
Fast-forward	Press and hold Next/Fast-forward.
Rewind	Press and hold Previous/Rewind.

Tutorial

For an in-depth tutorial on transferring music to and playing music on iPod mini, see the *iPod mini Tutorial* on the iPod mini CD.

© 2004 Apple Computer, Inc. All rights reserved.

Apple and the Apple logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. iPod is a trademark of Apple Computer, Inc.

Printed in XXXX

034-2428-A